

Interfacing FlashRunner 2.0 with NCJ38 devices

Parameters List

ENABLE_5V

ENABLE_5V <YES|NO>

The device works at 1.8V, but if a board hardware setup requires it, it's possible to enable the 5V for the VPROG0 with this parameter.

SOURCE_FORMAT

SOURCE_FORMAT <format_file>

The driver supports some specific flashing format files:

- HKMC_JCSHELL

Commands List

Memory types:

F → Code Flash

CONNECT

CONNECT <NO_CHECK>

Power on and entry.

NO_CHECK: can be used to avoid the communication check with the device during the entry.

PROGRAM

PROGRAM F

Program command for Code Flash.

DISCONNECT

Power off and exit.